



APPLICATIONS

General



Mechanically attach insulation to substrate with appropriate fasteners @ 16" O.C.. Drive fasteners flush with furring stud.

Use 1/2" gypsum board or approved thermal barrier to cover the insulation system.

CORNERS

Cut the insulation along one side of the built-in furring stud to form a corner as shown.



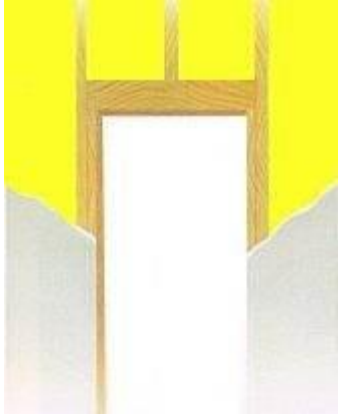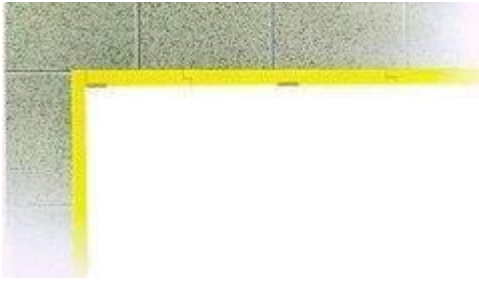

WINDOWS/DOORS

Cut the insulation flush against the jams as shown. Fasten as described above.

